


GT1 Quick start instructions

Product overview




Important Note:
Before installing the headset, please follow the quick manual instructions to connect the phone and test the sound and volume.
If there is a large difference in sound and volume after installation to the helmet, adjust the position of the horn in the helmet.

Power on/off

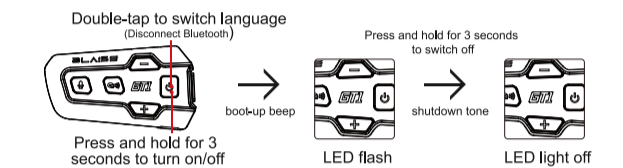


Pairing

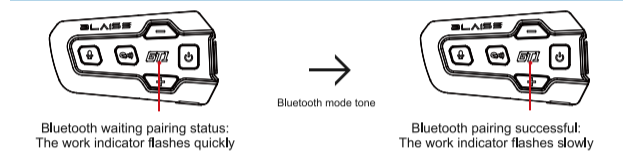

Music Sharing Pairing



Charging mode

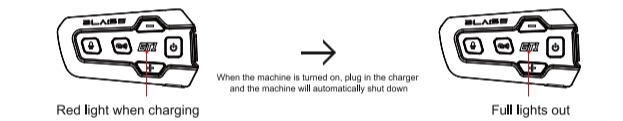


GT1 Panduan Memulai Cepat

Ikhtisar Produk




Pengingat Penting:
Sebelum memasang headset, hubungkan ponsel Anda sesuai dengan panduan manual cepat untuk menguji efek suara dan volume.
Jika terdapat perbedaan besar pada efek suara dan volume setelah dipasang ke dalam helm, harap sesuaikan posisi speaker di dalam helm.


Switchgear

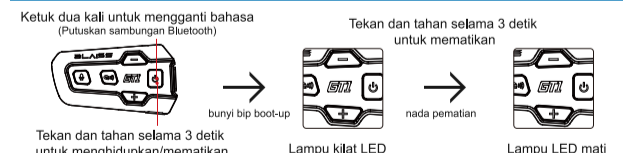


Koneksi Bluetooth

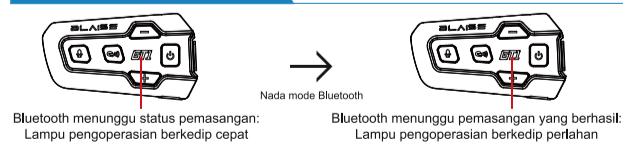


Mode pengisian daya

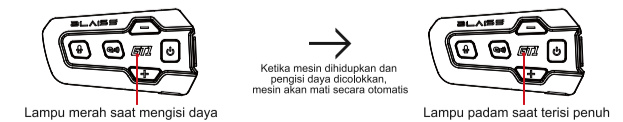


Pasangan Berbagi Musik

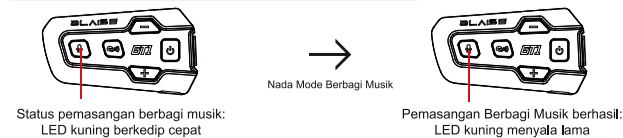


Phone features

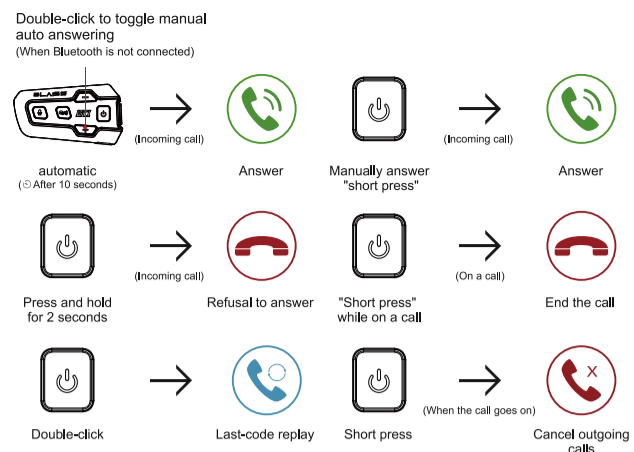

Lighting/Voice Assistant

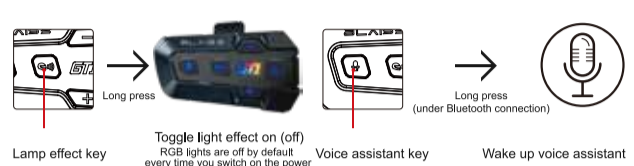

Intercom pairing

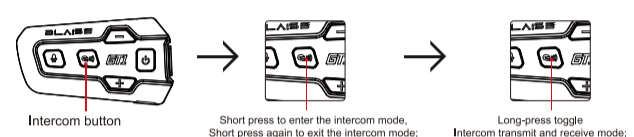


Intercom connection conditions: one machine needs to be in intercom receiving mode, one machine is in intercom transmitting mode, in order to be paired.
Intercom mode lights: green indicator light flashes quickly, enter the transmit mode, and voice prompts; green indicator light flashes slowly, enter the receive mode, and voice prompts; at this time, the two pairs of connected, connected successfully, the intercom indicator light has been 1S interval blinking once, accompanied by intercom connection success prompts, at this time you can talk to the call. **Long press volume up and down to adjust intercom volume**
First connection: after the two machines are switched on, short press the intercom key to enter the intercom mode, at this time the two machines are in the same mode intercom receiving mode, at this time you need to long press one of the intercom keys to make it enter the intercom transmitting mode for intercom pairing.
Intercom back to the connection: two days have been connected to the machine, just power on, short press the intercom key to enter the intercom mode, the two machines will be automatically connected.

Music features



Fungsi telepon

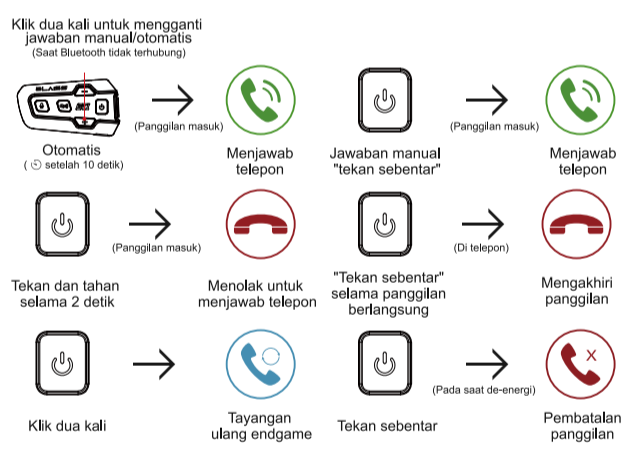


Asisten Pencahayaan/Suara



Fungsi musik




Pemasangan interkom

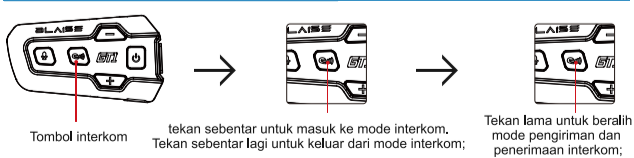


Kondisi sambungan interkom: satu mesin harus berada dalam mode penerimaan interkom, satu mesin dalam mode pemancaran interkom, agar dapat dipasang.
Lampu mode interkom: lampu indikator hijau berkedip cepat, masuk ke mode transmisi, dan petunjuk suara; lampu indikator hijau berkedip perlahan, masuk ke mode terima, dan petunjuk suara; saat ini dua pasang terhubung, setelah koneksi berhasil, lampu indikator interkom telah berkedip interval 1S satu kali, disertai dengan petunjuk keberhasilan koneksi interkom, saat ini Anda dapat berbicara untuk berbicara dengan panggilan. **Tekan lama volume ke atas dan ke bawah untuk menyesuaikan volume interkom**
Sambungan pertama: setelah kedua mesin dihidupkan, tekan sebentar tombol interkom untuk masuk ke mode interkom, saat ini kedua mesin berada dalam mode yang sama mode penerimaan interkom, saat ini Anda perlu menekan lama salah satu tombol interkom untuk membuat masuk ke mode transmisi interkom untuk pemasangan interkom.
Interkom kembali ke koneksi: dua hari telah terhubung ke mesin, cukup nyalakan, tekan sebentar tombol interkom untuk masuk ke mode interkom, kedua mesin akan terhubung secara otomatis.


Mixing function

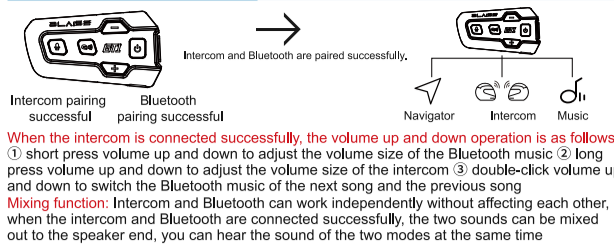

Intercom reset

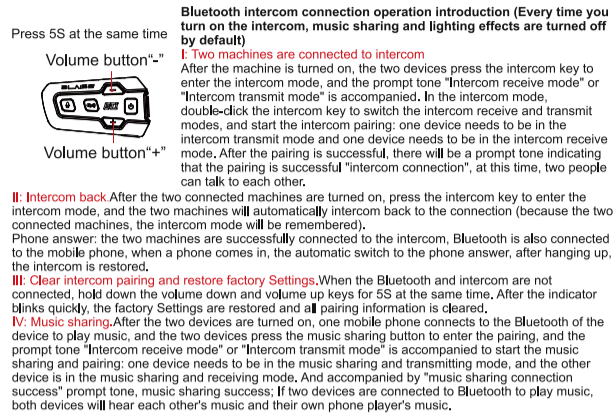

Product List

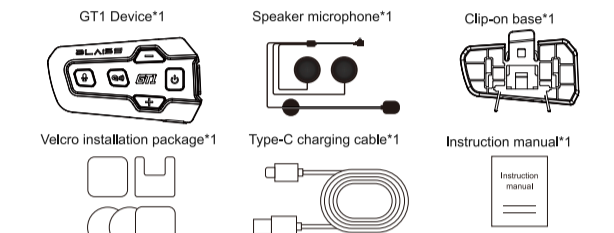


Notes

- Please do not put the product into the open fire to avoid explosion;
- Please do not disassemble the product to avoid damage to the product's electronic devices;
- Please do not close to sharp objects to cause damage to the product;
- Long time not used, please place in a dry place;
- Before using the Bluetooth device, please fully charge it;
- If the red light does not come on when charging, it may be the voltage is too low;
- To extend the life of the built-in polymer battery, please charge the device at least once a month.


Instruction warning

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.


Fungsi pencampuran

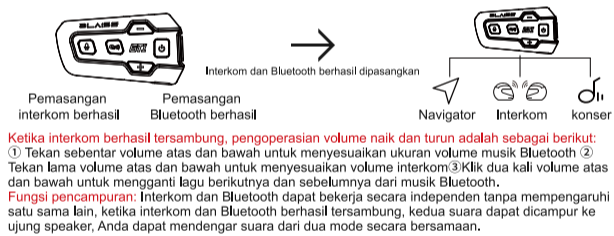

Pengaturan Intercom

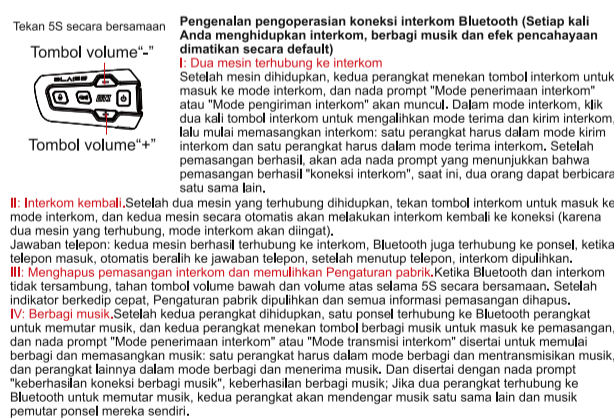

Daftar item

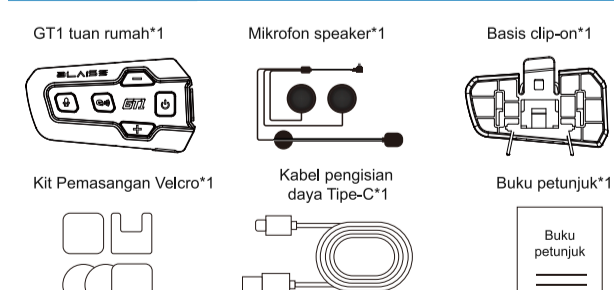

Peringatan

- Jangan letakkan produk di atas api terbuka untuk menghindari ledakan;
- Jangan membongkar produk untuk menghindari kerusakan pada perangkat elektronik;
- Jangan dekatkan dengan benda tajam yang dapat menyebabkan kerusakan pada produk;
- Harap letakkan di tempat yang kering jika tidak digunakan dalam waktu lama;
- Sebelum menggunakan perangkat Bluetooth, harap isi daya hingga penuh terlebih dahulu;
- Jika lampu merah tidak menyala saat mengisi daya, voltase mungkin terlalu rendah;
- Untuk memperpanjang masa pakai baterai polimer internal, harap isi daya perangkat setidaknya sebulan sekali.

